


### Armut Tip Soket

Rope Pear Socket

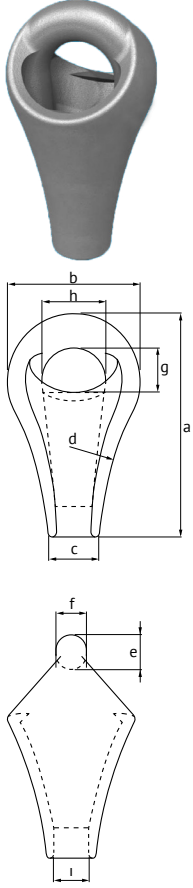

Soket Numarası	Halat Çapı	Taşıma Kapasitesi	Kopma Yüğü	Ölçüler									Birim Ağırlık
				Size									
Pear No	Rope Dia.	SWL	Breaking Load	a	b	c	d	e	f	g	h	ı	Ad/kg
	mm	t	t	mm	mm	mm	mm	mm	mm	mm	mm	mm	
1	10-11	1,5	10	81	48	22	195	12	11,5	20	24	12	0,4
2	12-13	2	14	95	56	25	195	15,5	13,5	22	25	14	0,5
3	14-15	2,5	17,5	109	64	28	220	17,5	15,5	24	29	16	0,6
4	16-17	3	22,5	123	70	31	220	19,5	17,5	26	31	18	0,9
5	18-19	4,5	27,5	135	84	33	245	21	19	30	42	20	1,3
6	20-21	5	35	152	84	36	310	23	21	33	38	23	1,7
7	22-24	7	42,5	166	100	40	310	26	23	37	48	26	2,3
8	25-27	8	52,5	186	100	43	350	28	25	39	44	29	3,2
9	28-30	11	70	202	120	45	350	31	27	40	58	32	4,1
10	31-33	13	85	222	120	52	445	32	28,5	45	56	37	5,2
11	34-36	15	95	239	142	55	445	36	31,5	50	70	40	6,4
12	37-39	17	110	264	142	60	495	39	34,5	51	64	41	7,9
13	40-42	21	125	285	166	63	555	43	36,5	59	80	44	9,5
14	43-45	26	155	312	166	68	595	47	40	62	72	48	11,2
15	46-48	30	180	337	170	75	595	51	44	66	68	53	13
17	52-56	42,5	240	400	220	84	880	60	54	75	90	59	23