

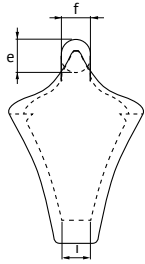


### S Armut Tip Soket

Rope Pear Socket Type S

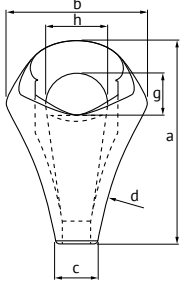

Soket Numarası	Halat Çapı	Taşıma Kapasitesi	Kopma Yüğü	Ölçüler									Birim Ağırlık
				Size									
Pear No	Rope Dia.	SWL	Breaking Load	a	b	c	d	e	f	g	h	i	Ad/kg
	mm	t	t	mm	mm	mm	mm	mm	mm	mm	mm	mm	
924	22-24	11	70	192	133	40	325	31	27	40	58	27	4
1026	25-27	13	85	212	143	43	375	35	30,5	43	60	30	5
1130	28-30	15	95	239	156	45	400	36	31,5	50	70	33	7
1232	31-33	17	110	249	165	52	450	39	34,5	57	72	36	8,5
1336	34-36	21	125	285	184	62	450	43	36,5	60	80	40	9,5
1440	37-40	26	155	297	192	60	475	47	40	62	80	44	12
3221	42-44	32,5	189	314	204	66	425	53	46	70	80	47	13,5
1548	46-48	30	180	329	192	67	575	51	44	66	80	52	12,5
1648	46-48	36	215	343	218	70	500	56	50	75	90	52	18

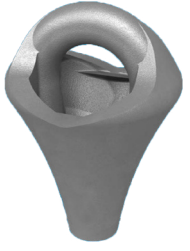